

LUMINATION, ENHANCED LUMINATION, DECO LUMINATION COLLECTIONS

Models ending with: -CLED.1

- 1) Connect power using a switch activated GFCI connection.
- 2) On the under-side of your SÉURA lighted unit, there are three chrome adjustment knobs: Speed, Intensity/Power, and Program. Use these adjustment knobs to set the desired functions of your Color Changing LEDs. Follow the table below to designate your preferred settings.

ADJUSTMENT KNOBS

A – Speed

Determines the rate the LEDs change from one color to another. Adjust to the left to “hold” on desired color.


B – Intensity/Power

Controls the amount of light emitted. When set to zero, the entire unit is in “off” mode.

C – Program

Designates the lighting program that is being displayed; there are 8 pre-programmed options to choose from.

Note: OTDMXRGB can be controlled by DMX controllers providing protocols that meet USITT DMX-512A or DMX512 (DIN 56930-2)

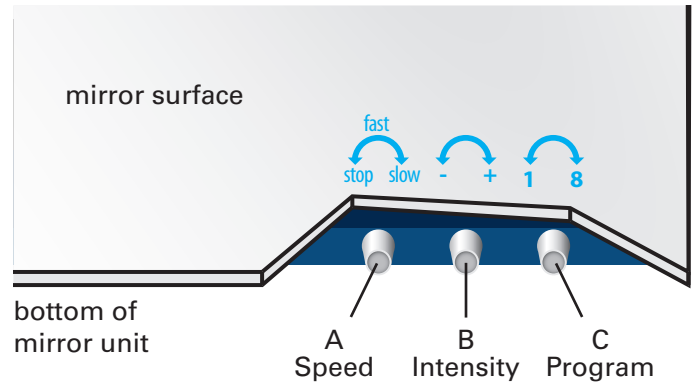


PROGRAMS

Color-matched PANTONE numbers shown.

Program

Program Scenes

1 – chroma

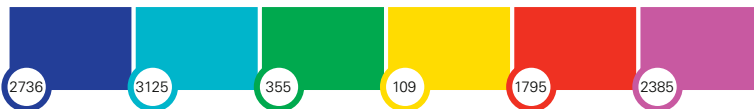

2 – flame




3 – calm



4 – vibe



5 – spectra

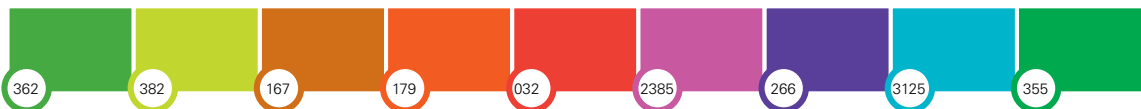

6 – coast



7 – dusk



8 – zen

