

# PINOUT DIAGRAM

## TV Command and Control Interface:

Female RJ45

1. IR IN with carrier
2. RS-232 TXD (From TV)
3. RS-232 RXD (To TV)
4. IR IN no carrier
5. GND
6. IR OUT no carrier
7. IR OUT with carrier
8. +5VDC @ 100mA output from TV



### IMPORTANT

This connector is not an Ethernet connection. Do not connect this port to an Ethernet connection; damage can occur to the TV and the Ethernet port.

